




Please order by parts number, not key number
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

BAITCASTING REEL

TATULA CT 100HL/ 100HSL

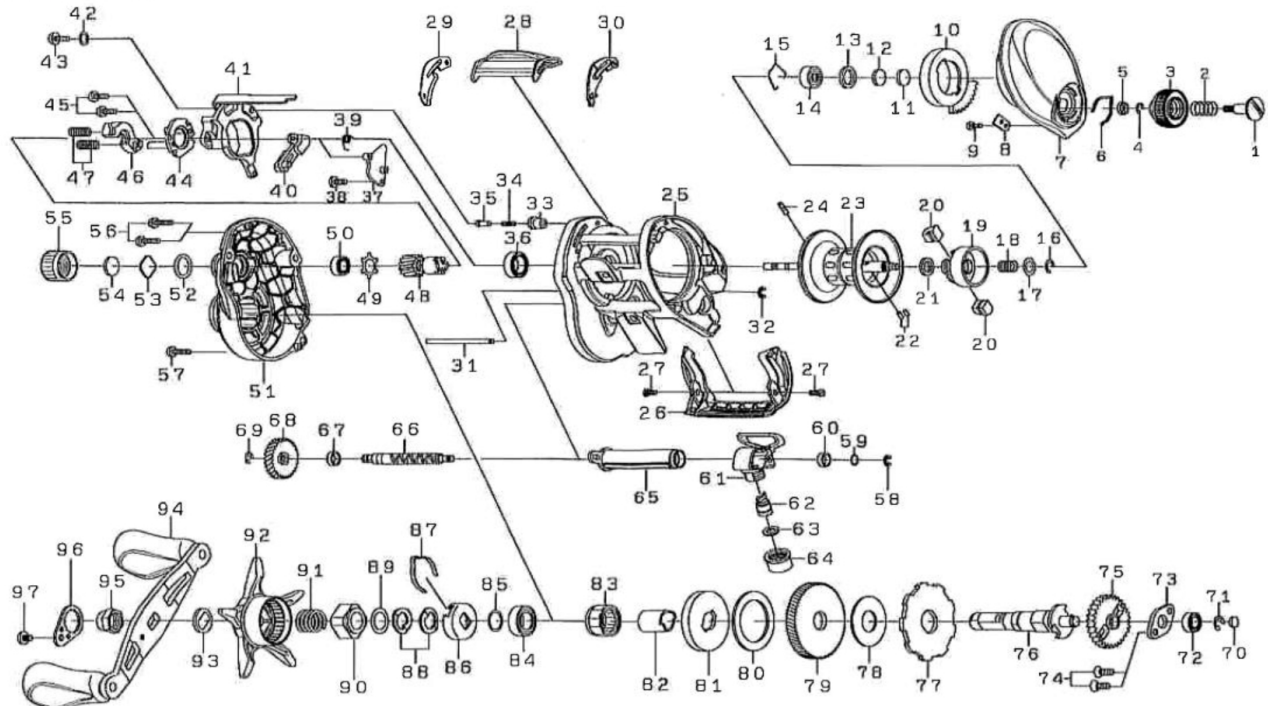

リップラップ オーバーホール作業用資料: リールのメンテは“ビワエフ オーバーホール”で検索

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	H93-0401	SET PLS CREW	58	320-5901	RET
2	E16-7101	SPRING	59	B41-1700	WASHER
3	H93-0234	BRAKE ADJ KNOB	60	G72-0001	WORM SHAFT BEARING
4	B33-9801	RET	61	J24-3303	T-LEVEL WIND
5	F63-7701	BRAKE DIAL WASHER	62	121-4212	LINE GUIDE PAWL
6	H66-3401	BRAKE CLICK SPRING	63	373-1300	WASHER
7	H94-4903	R/S PLT	64	F40-2801	PAWL CAP
8	H91-5501	BRAKE DIAL RET	65	J24-7601	LEVEL WIND GUARD
9	G93-9301	SCREW	66	J24-3601	WORM SHAFT
10	H93-0501	MAGNET HOLDER	67	G72-0001	WORM SHAFT SPACER
11	375-7400	SPACER (A)	68	H91-0501	WORM GEAR
12	375-7411	SPACER (B)	69	B33-9801	RET
13	G18-5101	SPACER ◎	70	G09-9800	WASHER
14	G51-1503	BALL BEARING	71	320-8002	RET
15	F03-2201	BEARING RETAINER	72	B35-8607	BALL BEARING
16-24	Z02-2784	SPOOL ASSEMBLY	73	H92-8901	PLATE
25	J33-8001	FRAME	74	E13-4509	SCREW
26	J24-4002	FRONT PLT	75	H91-2701	DRIVE SHAFT GEAR
27	H84-2803	SCREW	76	H91-1602	DRIVE SHAFT
28	J33-5001	CLUTCH LEVER	77	H92-9401	A/R RATCHET
29	H91-5701	CLUTCH LEVER PLT	78	J08-5101	DIVE SHAFT WASHER
30	H91-5601	CLUTCH LEVER PLT	79	H94-4802	DRIVE GEAR
31	J24-4101	STABILIZER BAR	80	H45-2602	WASHER
32	H70-4101	RET	81	H91-3201	KEY WASHER
33	H91-0601	COLLAR	82	J37-7801	GEAR SHAFT COLLAR
34	H92-8801	SPRING	83	G81-9801	ROLLER CLUTCH
35	J05-5201	PIN	84	B86-1704	BALL BEARING
36	B86-1704	BALL BEARING	85	B55-3801	WASHER
37	J24-7401	PLATE (A)	86	F02-8203	CLICK LEAF SPRING HOLDER
38	H29-4101	SCREW	87	F03-2401	BRAKE CLICK SPRING
39	J24-7501	CLUTCH CAM SPRING	88	150-8901	SPRING WASHER
40	J22-1501	CLUTCH TRIP LEVER	89	H92-9501	WASHER
41	J24-7201	CLUTCH CAM	90	H91-2002	NUT
42	H15-9201	WASHER	91	J01-1901	SPRING C
43	352-2501	SCREW	92	H91-1901	STAR DRAG
44	H65-9101	CLUTCH CAM PLT	93	F57-6601	HANDLE COLLAR
45	B03-2904	SCREW	94	J14-2801	HANDLE ASSEMBLY
46	H94-4401	YOKE	95	G79-3302	HANDLE NUT
47	H58-2001	YOKE SPRING	96	H83-4512	HANDLE NUT PLT
48	H94-4701	PINION GEAR	97	353-8301	HANDLE NUT PLT SCREW
49	H18-0501	BEARING RETAINER			
50	G43-1102	BALL BEARING			
51	J21-4407	L/S PLT			
52	B05-5201	O-RING			
53	J21-3101	SPACER (F)			
54	B17-5503	CAP RUBBER WASHER			
55	J28-8202	CAST CONTROL CAP			
56	G04-0814	PLT SCREW			
57	G04-0801	PLT SCREW			

TATULA CT 100HSL SPECIAL PARTS		
Key No.	Part No.	Part Name
3	H93-0220	BRAKE ADJ KNOB
48	J00-4301	PINION GEAR
51	J21-4408	L/S PLT
79	J00-4102	DRIVE GEAR
96	H83-4504	HANDLE NUT PLT